

CODE FOR THE ATV-TRANSMITTER

MHz 0 = down

1240 = 0 0 0 1 1 0
 1241 = 1 0 0 1 1 0
 1242 = 0 1 0 1 1 0
 1243 = 1 1 0 1 1 0
 1244 = 0 0 1 1 1 0
 1245 = 1 0 1 1 1 0
 1246 = 0 1 1 1 1 0
 1247 = 1 1 1 1 1 0
 1248 = 0 0 0 0 0 1
 1249 = 1 0 0 0 0 1
 1250 = 0 1 0 0 0 1
 1251 = 1 1 0 0 0 1
 1252 = 0 0 1 0 0 1
 1253 = 1 0 1 0 0 1
 1254 = 0 1 1 0 0 1
 1255 = 1 1 1 0 0 1
 1256 = 0 0 0 1 0 1
 1257 = 1 0 0 1 0 1
 1258 = 0 1 0 1 0 1
 1259 = 1 1 0 1 0 1

MHz 1 = up

1260 = 0 0 1 1 0 1
 1261 = 1 0 1 1 0 1
 1262 = 0 1 1 1 0 1
 1263 = 1 1 1 1 0 1
 1264 = 0 0 0 0 1 1
 1265 = 1 0 0 0 1 1
 1266 = 0 1 0 0 1 1
 1267 = 1 1 0 0 1 1
 1268 = 0 0 1 0 1 1
 1269 = 1 0 1 0 1 1
 1270 = 0 1 1 0 1 1
 1271 = 1 1 1 0 1 1
 1272 = 0 0 0 1 1 1
 1273 = 1 0 0 1 1 1
 1274 = 0 1 0 1 1 1
 1275 = 1 1 0 1 1 1
 1276 = 0 0 1 1 1 1
 1277 = 1 0 1 1 1 1
 1278 = 0 1 1 1 1 1
 1279 = 1 1 1 1 1 1