


SCHEMATIC DIAGRAM

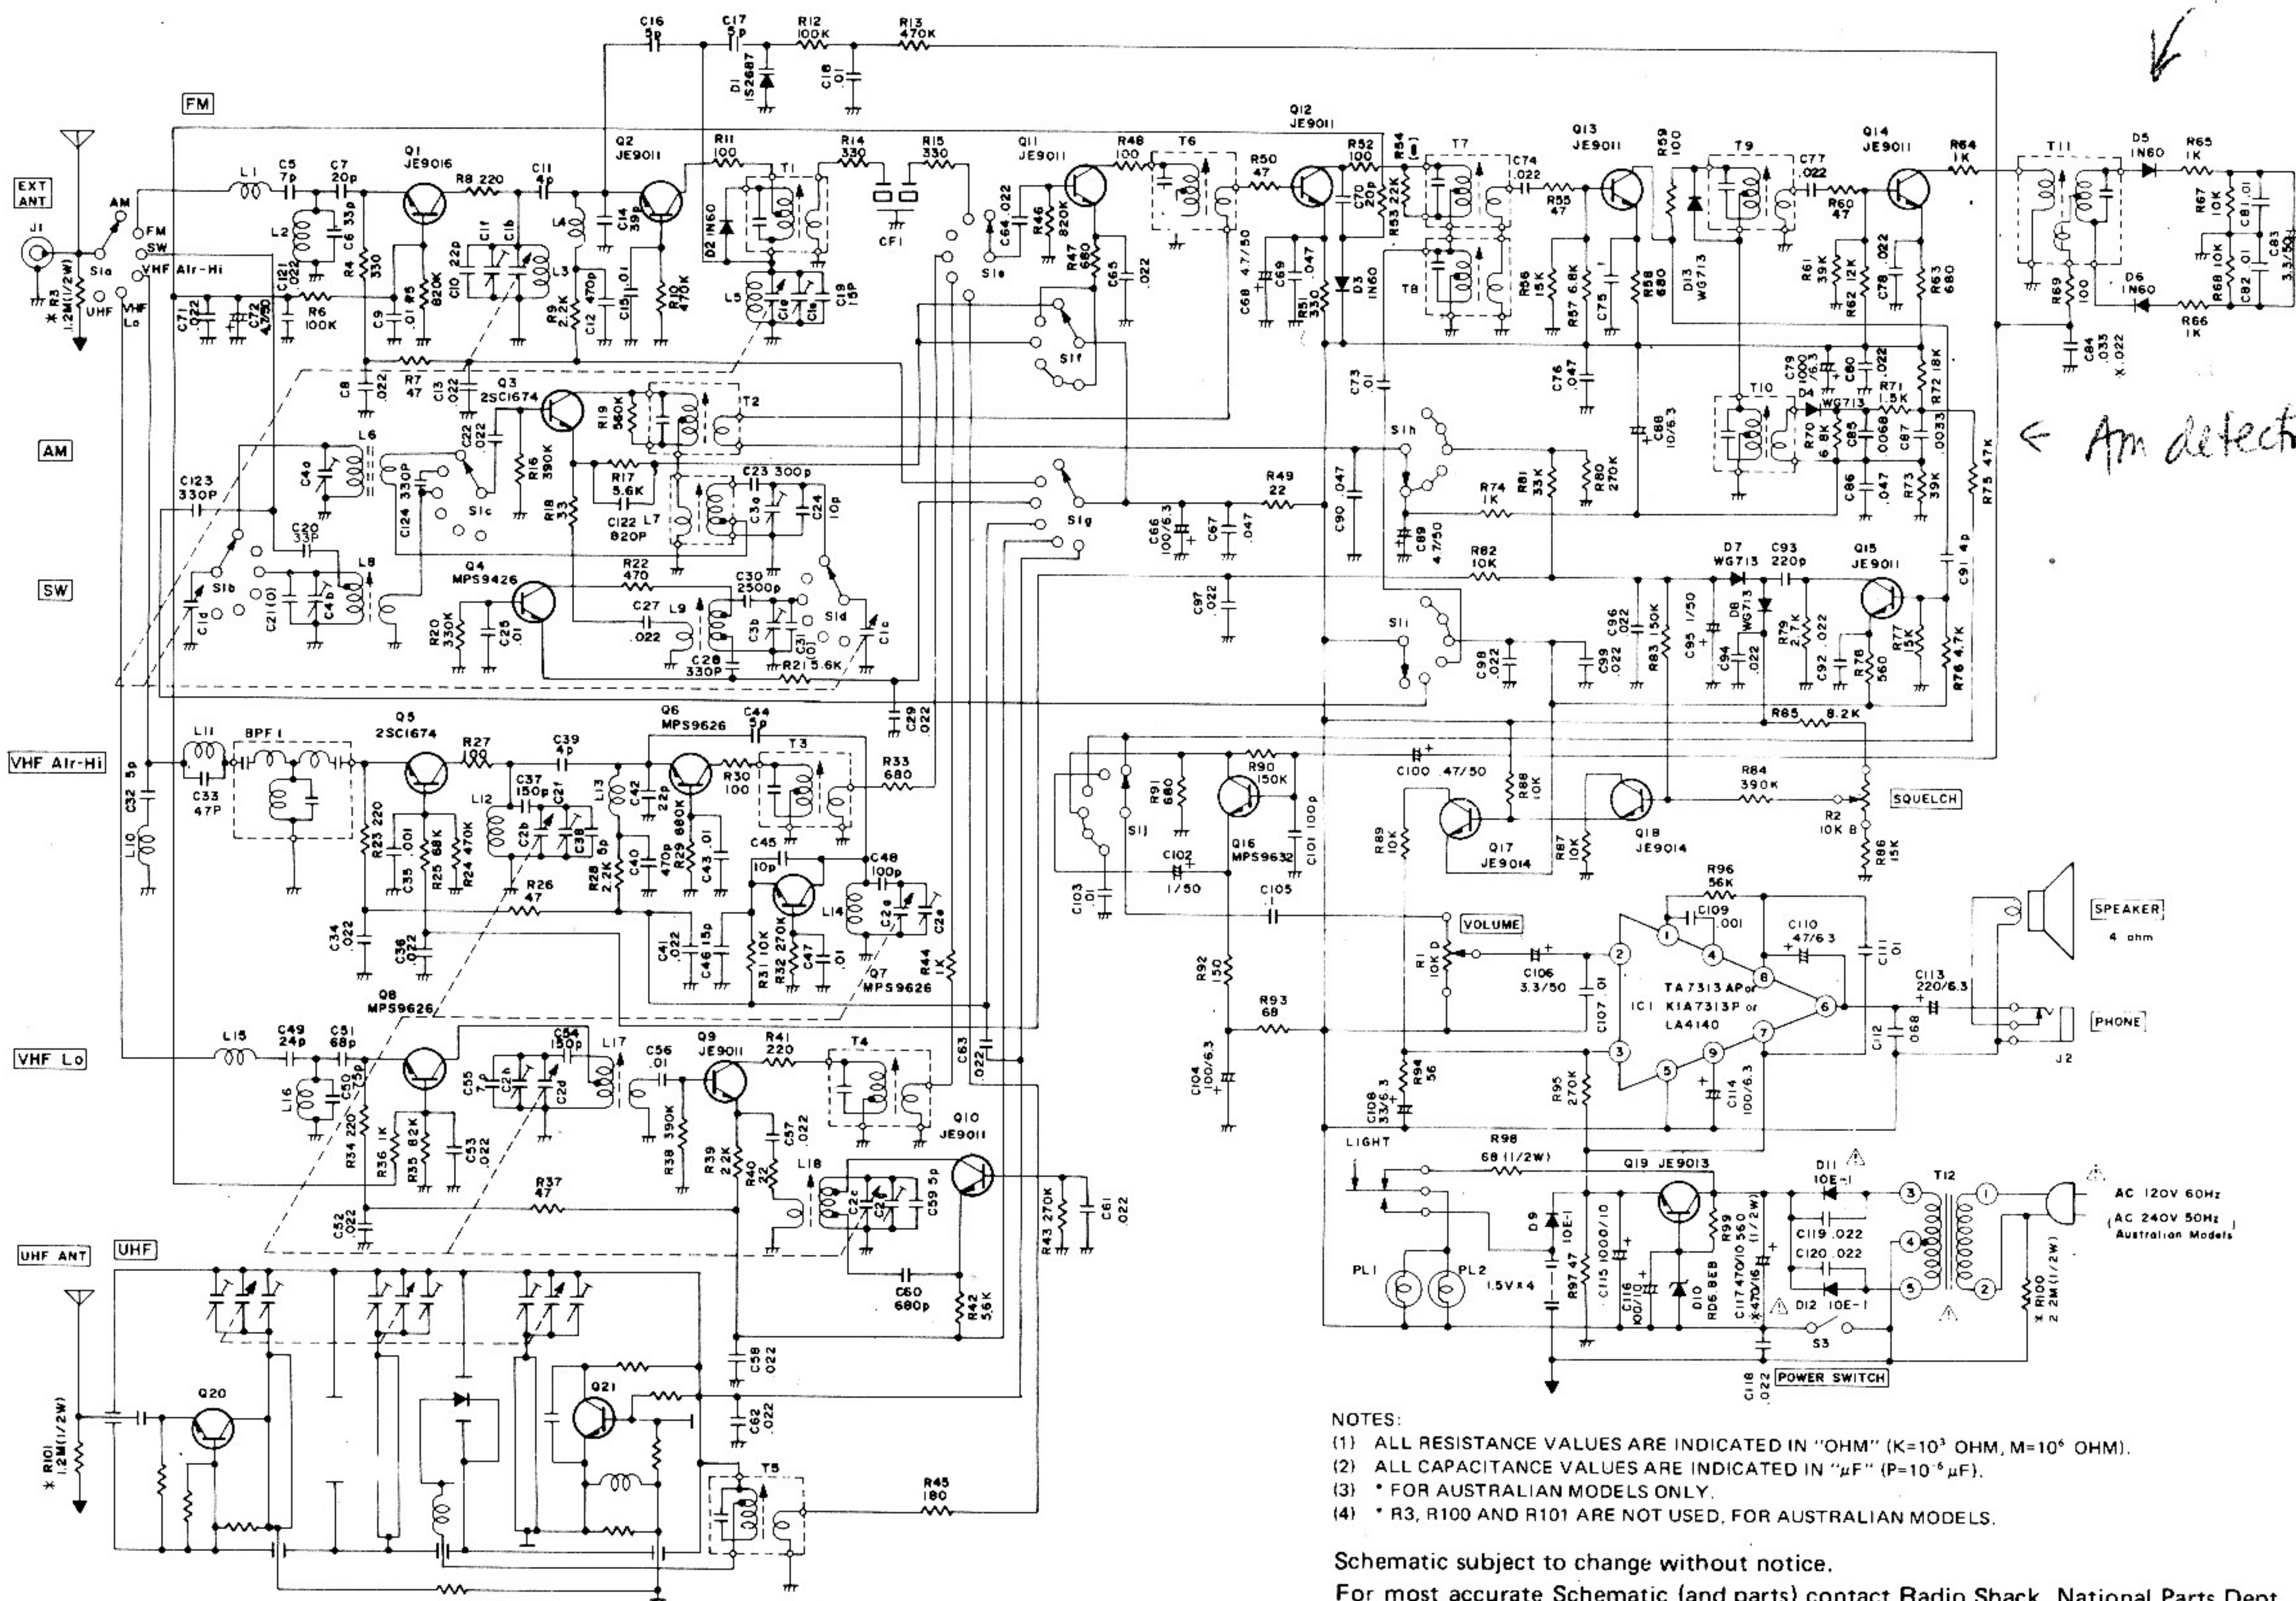

NOTES:

- (1) ALL RESISTANCE VALUES ARE INDICATED IN "OHM" (K=10³ OHM, M=10⁶ OHM).
- (2) ALL CAPACITANCE VALUES ARE INDICATED IN "μF" (P=10⁻⁶ μF).
- (3) * FOR AUSTRALIAN MODELS ONLY.
- (4) * R3, R100 AND R101 ARE NOT USED, FOR AUSTRALIAN MODELS.

Schematic subject to change without notice.

For most accurate Schematic (and parts) contact Radio Shack, National Parts Dept., Fort Worth TX 76101
In UK, contact Tandy Electronics, National Parts Dept., Bilston Road, Wednesbury, West Midlands WS10 7JN.

In Australia, contact Tandy Australia Limited, National Parts Dept., 91 Kurrajong Avenue, Mount Druitt, N.S.W. 2770

CAUTION: SINCE THE COMPONENTS MARKED BY Δ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED ON PARTS LIST ONLY.